 

 
 

 
 
 
 

 

 
 
 
 
 


 




 
 


 
 






 






 




Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Repeat	 Text
 Play	 Play
 Stop	 Stop
 Pause	 Pause

Originale	Sostituto
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Disc Menu	 D. Menu
 Info/Menu	 Info
 Back	 Back
 Home	 Smart
 Title/Popup	 Options
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Originale		Sostituto		Originale		Sostituto	
	Blue		Blue				
	Power Tv	 + 	Shift + Power				
	Input Tv	 AV	AV				
	Vol-		Vol -				
	Vol+		Vol +				

