






 

 






Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 DR+/Pop-Up-M	 D.Menu / Top
 */Zoom	 Zoom / Size
 */Zoom	 Fav / Marker / PC
 Web	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 0/AV	 AV / Input / RDS

Originale	Sostituto
 EPG	 Guide / EPG / -/-
 Home	 Shift + Menu /
 Home	 Smart / List
 PIP	 Picture / Format
 Text	 Text / Goto
 Menu	 Menu / Home
 Back	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 PR-	 CH- / Page-





Originale		Sostituto		Originale	Sostituto
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue/Marker		Blue / Prime Video / Random		
	Blue/Marker	+	Shift + Fav / Marker / PC		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		

