



Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 i/Info	 Info / Angle
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 World	 Smart / List
 Music Photo	 Display / Media
 Guide	 Guide / EPG / -/--
 */o	 Setup / OPT /
 */o..	 Zoom / Size





	Originale	Sostituto	Originale	Sostituto
	≡/Text	GOTO TEXT Text / Goto		
	Red	NETFLIX SEARCH Red / Netflix / Search		
	Green	APP REPEAT Green / APP / Repeat		
	Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
	Blue	Prime Video RANDOM Blue / Prime Video / Random		
	LANG Lang	LANG I/II AUDIO Audio / Lang I/II		
	[≡]..	EQ SUBTITLE Subtitle / EQ		
	[-O-]	FORMAT PICTURE Picture / Format		
	<<<	TUNE- <<< / Tune-		
		STEP-FREEZE Pause / Step / Freeze		
	>>>	TUNE+ >>> / Tune+		
	Rec	REC MODE Rec / Rec Mode		
	▶	SLOW ▶ Play / Slow		
	■	HOLD ■ Stop / Hold		

