





 

 

 

 



 

 







 



 







 



 



 





 

 



 



 



 









 

 





 






Originale		Sostituto		Originale		Sostituto	
	Power		Power		Swap		Back / Return
	Mute		Mute / Dimmer		Vol+		Vol+
	Hold		Stop / Hold		PP		Smart / List
	♪		Sound / Title		PR+		CH+ / Page+
	Sub		Subtitle / EQ		Vol-		Vol-
	16:9		Picture / Format		PR-		CH- / Page-
	TV/TX		TV/Radio /		1		1
	Double		D.Menu / Top		2		2
	[ ]		Setup / OPT /		3		3
	Mix		Text / Goto		4		4
	AV		AV / Input / RDS		5		5
	Menu		Menu / Home		6		6
	Up		Up		7		7
	Left		Left		8		8
	OK		OK		9		9
	Right		Right		-/--		Guide / EPG / -/--
	Down		Down		0		0





Originale	Sostituto	Originale	Sostituto
	Violet  Fav / Marker / PC		
	Red  Red / Netflix / Search		
	Green  Green / APP / Repeat		
	Yellow/Timer  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	Update  +  Shift + OK		
	Reveal  +  Shift + Back / Return		
	P100  +  Shift + 0		

Originale	Sostituto

