















 



 

 



 









 

 



 

 











 

















Originale	Sostituto
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Setup / OPT /
	 0
	 AV / Input / RDS
	 Shift + 1
	 Sound / Title
	 Picture / Format

Originale	Sostituto
	 Info / Angle
	 Up
	 Left
	 OK
	 Right
	 Down
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Text / Goto
	 Menu / Home
	 CH+ / Page+
	 Vol-
	 Back / Return
	 TV/Radio /





Originale	Sostituto
 CH-	 CH- / Page-
 FAV	 Fav / Marker / PC
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Guide	 Guide / EPG / -/-
 [?]	 Shift + Info / Angle
 [≡x]	 Shift + 5
 [:=]	 Shift + 4
 [⇅]	 Shift + 3
 [⇅]	 Shift + 2
 PIP Pos	 D.Menu / Top
 PIP Size	 Zoom / Size
 PIP	 Eject / Surround

Originale	Sostituto

