



Originale	Sostituto	Originale	Sostituto
Power	Power	Tools	Setup / OPT /
TV	TV/Radio /	Return	Shift + Back / Return
1	1	Up	Up
2	2	Left	Left
3	3	Enter	OK
4	4	Right	Right
5	5	CH List	Smart / List
6	6	Down	Down
7	7	Exit	Exit / Cancel / Clear
8	8	Red	Red / Netflix / Search
9	9	Green	Green / APP / Repeat
FAV CH	Fav / Marker / PC	Yellow	Yellow / YouTube / Repeat
0	0	Blue	Blue / Prime Video / Random
PRE-CH	Back / Return	Vol+	Vol+
Info	Info / Angle	Source	AV / Input / RDS
Menu	Menu / Home	PR+	CH+ / Page+
Guide	Guide / EPG / -/--	Vol-	Vol-

Originale	Sostituto	Originale	Sostituto
Power	Power	Tools	Setup / OPT /
TV	TV/Radio /	Return	Shift + Back / Return
1	1	Up	Up
2	2	Left	Left
3	3	Enter	OK
4	4	Right	Right
5	5	CH List	Smart / List
6	6	Down	Down
7	7	Exit	Exit / Cancel / Clear
8	8	Red	Red / Netflix / Search
9	9	Green	Green / APP / Repeat
FAV CH	Fav / Marker / PC	Yellow	Yellow / YouTube / Repeat
0	0	Blue	Blue / Prime Video / Random
PRE-CH	Back / Return	Vol+	Vol+
Info	Info / Angle	Source	AV / Input / RDS
Menu	Menu / Home	PR+	CH+ / Page+
Guide	Guide / EPG / -/--	Vol-	Vol-





Originale

Sostituto

	Mute		Mute / Dimmer
	PR-		CH- / Page-
	TTX/MIX		Text / Goto
	Media.P		Display / Media
	P.Size		Zoom / Size
	Dual I-II		Audio / Lang I/II
	AD		Sound / Title
	Subt.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Originale

Sostituto

