



 

 
 
 



 

 
 











 



 








 



 
 

 
 
 

 



 



 
 


 


 






 


 

 




 
 


 
 

 







Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Zoom		Shift + Eject
	Open/Close		Eject		OO/Audio		Dual
	Input Select		AV		Search		TV/R
	1		1		Repeat		Text
	2		2		Top Menu		Menu
	3		3		Disc Menu		D. Menu
	4		4		Enter		Ok
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Return		Back
	0		0		Display		Info
	Prog+		Ch +		Instant Skip		Guide
	Prog-		Ch -		1.3x/0.8x Play		Subt
	Clear		Exit		Time Slip		Sleep
	Mode		Format		Play		Play





Originale		Sostituto		Originale		Sostituto	
	Stop		Stop				
	Pause		Pause				
	<<		<<				
	>>		>>				
	>>		>>				
	<<		<<				
	Rec		Rec				
	DVD		Green				
	VCR		Red				
	Dubbing		Blue				
	Sat Link		Media				
	Timer Set		3D				
	Timer Prog.		List				
	Rec Mode		Shift + Rec				
	Setup		Options				

