 





 

 


 
 





 
 

 
 








 






Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Audio I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Menu	 Menu
 Exit	 Exit
 Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow		<</FAV-		<<
	Blue		Blue		>>/FAV+		>>
	Subtitle		Subt				
	Size		Format				
	Reveal		Back				
	Mix		Smart				
	Index		List				
	EPG		Guide				
	Media		Media				
	Timeshift		Options				
	Tv/Radio		TV/R				
	Play		Play				
	Pause/Hold		Pause				
	Rec		Rec				
	Stop/FAV		Stop				
	I<</Cancel		I<<				
	>>I/Subpage		>>I				

