 





 

 


 
 





 
 

 
 








 






 

 
 
 

 
 
 
 
 
 
 

 

 
 
 
 
 
 
 
 

 


 
 
 



 

 
 
Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Audio I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Menu	 Menu
 Exit	 Exit
 Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green





Originale	Sostituto
 Yellow	 Yellow
 Blue	 Blue
 Subtitle	 Subt
 Size	 Format
 Reveal	 Back
 Mix	 Smart
 Index	 List
 EPG	 Guide
 Media	 Media
 Timeshift	 Options
 Tv/Radio	 TV/R
 Play	 Play
 Pause/Hold	 Pause
 Rec	 Rec
 Stop/FAV	 Stop
 I<</Cancel	 I<<
 >>I/Subpage	 >>I

Originale	Sostituto
 <</FAV-	 <<
 >>/FAV+	 >>

