

 
 
 
 
 
 
 

 



 


 


 





 

 
 
 










 


 
 
 

 






 
 

 
 


 

 
 




 














Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 6	 6
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Repeat	 Text
 Shuffle	 Media
 Play	 Play

Originale	Sostituto
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 <<	 <<
 >>	 >>
 <<	 <<
 Option	 Options
 Display	 Info
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Folder Up	 Ch +
 Folder Down	 Ch -
 Clear	 Exit
 Sleep	 Sleep





Originale	Sostituto
 Dimmer	 TV/R
 TP	 Pre Ch
 Mono	 Dual
 Preset Up	 Shift + Up
 Preset Down	 Shift + Down
 Memory	 Rec
 Tuning Up	 Green
 Tuning Down	 Red
 CD	 Shift + 1
 USB	 Shift + 2
 AUX	 Shift + 3
 Tuner	 Shift + 4
 iPod	 Shift + 5
 Folder Up iPod	 Shift + Ch +
 Folder Down iPod	 Shift + Ch -
 Repeat iPod	 Smart
 Shuffle iPod	 Shift + Media

Originale	Sostituto
 Enter iPod	 Shift + Ok
 >>I iPod	 Shift + Right
 I<< iPod	 Shift + Left
 Menu iPod	 Menu
 Play/Pause iPod	 Shift + Play
 Open/Close	 Eject
 Clock	 D. Menu
 Timer	 AV

