



Originale	Sostituto
 Power	 Power
 Input TV	 TV/Radio /
 Input Av	 AV / Input / RDS
 Guide	 Guide / EPG / -/--
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [+]/Aspect	 Picture / Format

Originale	Sostituto
 Link Vieta	 Smart / List
 Option	 Setup / OPT /
 Direct Tv Rec	 Shift + Rec / Rec Mode
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/VCR	 0
 0/VCR	 Shift + 4 / Shift + 4
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+





Originale	Sostituto
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
[≡]/Text	Text / Goto
[≡♦]/STTL	Subtitle / EQ
[≡i]/Index	Display / Media
[≡+]/Hold	Shift + Stop /
Power DVD	Shift + Power
Rec DVD	Rec / Rec Mode
Programme Down	Shift + CH- /
Programme Up	Shift + CH+ /
<</I<< DVD	<< / Tune-
<</I<< DVD	I<< / Preset-
>>/>>I DVD	>>I / Preset+
>>/>>I DVD	>> / Tune+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze

Originale	Sostituto
Play DVD	Play / Slow



