



 




 



 
 




 

 



 




 
 

 




Originale	Sostituto
 Power	 Power
 3D	 Shift + 3
 Input TV	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 Aspect	 Picture / Format
 N	 D.Menu / Top
 Surround	 Eject / Surround
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 Display / Media
 Internet	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Originale	Sostituto
 Options	 Setup / OPT /
 Down	 Down
 Return/Back	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Still	 Shift + Pause / Step /
 Index	 TV/Radio /
 Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





	Originale	Sostituto		Sostituto
	7	7		7
	8	8		8
	9	9		9
	Mute	Mute / Dimmer		Mute / Dimmer
	0	0		0
	Last View	Fav / Marker / PC		Fav / Marker / PC
	Vol+	Vol+		Vol+
	▲	CH+ / Page+		CH+ / Page+
	Vol-	Vol-		Vol-
	▼	CH- / Page-		CH- / Page-
	Second Power	Shift + Power		Shift + Power
	Programme ▼	Shift + CH- /		Shift + CH- /
	Programme ▲	Shift + CH+ /		Shift + CH+ /
	<<<	<< / Tune-		<< / Tune-
	Play	Play / Slow		Play / Slow
	>>>	>> / Tune+		>> / Tune+
	Stop	Stop / Hold		Stop / Hold

	Originale	Sostituto
	Pause/II>	Pause / Step / Freeze
	Rec	Rec / Rec Mode

