




 
 







 


 
 







 
 


 
 

 




 
 

 


 

 
 

 

 

 
 

 
 
 
 


 
 
 


 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Pause		Pause
	Radio/Input		AV		Scan >>		>>
	1		1		<< Scan		<<
	2		2		Skip >>		>>
	3		3		<< Skip		<<
	4		4		Rec		Rec
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Mute		Mute
	8		8		Info/Display		Info
	9		9		Home		Smart
	0		0		Return		Back
	Clear		Exit		Disc Menu		D. Menu
	Repeat		Text		Title/PopUp		List
	Open/Close		Eject		Sound Effect		Dual
	Play		Play		Optical		Options
	Stop		Stop		Music ID		Subt



