 
 


 
 
 
 

 



 






 
 
 


 







 

Originale	Sostituto	Originale	Sostituto
	Power		Power
	Info		Info
	Setup		Options
	Mute		Mute
	Menu		Menu
	Music		Media
	Copy		3D
	Zoom		Eject
	TV System		TV/R
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Return		Back
	Home		Smart
	Up		Up
	Down		Down
	Right		Right

Originale	Sostituto	Originale	Sostituto
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timeshift		Sleep
	Goto		Pre Ch
	Rec		Rec
	Play		Play
	Stop		Stop





	Originale	Sostituto
	Pause	 Pause
	I<<	 I<<
	>>I	 >>I
	<<	 <<
	>>	 >>
	I>/Slow	 Format
	A-B	 D. Menu
	Timer	 +  Shift + AV
	Rec List	 List
	Subtitle	 Subt
	Repeat	 +  Shift + Text
	Audio	 Dual
	Red	 Red
	Green	 Green
	Yellow	 Yellow
	Blue	 Blue
	TTX	 Text

	Originale	Sostituto
	EPG	 Guide

