
 

 
 













 














 


 



 





Originale	Sostituto
 Power	 Power
 Home/Menu	 Menu / Home
 [ <> ]/Format	 Shift + Picture / Format
 [ [ ] ]/Incr. Surr.	 Eject / Surround
 Teletext/MHEG	 Text / Goto
 Source	 AV / Input / RDS
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow/Subtitle	 Subtitle / EQ
 Yellow/Subtitle	 Yellow / YouTube / Repeat
 Blue/AD	 Audio / Lang I/II
 Blue/AD	 Blue / Prime Video / Random
 [ III ]/Guide	 Guide / EPG / -/--
 [ ≡ ]/Options	 Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK

Originale	Sostituto
 Right	 Right
 Back/P/P	 Back / Return
 Down	 Down
 [ i ]/Info	 Info / Angle
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Originale	Sostituto	Originale	Sostituto
	9		9
	J/Sound		Sound / Title
	0		0
	[ ]/Picture		Picture / Format

