
 

 







 


 





 
 











 







 


Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Pic Size	 Format
 Pic Mode	 Shift + Format
 Sleep	 Sleep
 Dual I-II	 Dual
 S.Mode	 Shift + Dual
 Still	 Shift + Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0
 -/--	 Shift + Guide
 PRE-CH	 Pre Ch
 Keylock	 Shift + TV/R
 PIP	 3D
 P.Input	 Subt
 P.Position	 List
 P.Size	 Shift + Eject
 P.Swap	 Options
 TV	 TV/R
 PC/HDMI	 Media
 AV/Sel	 Smart
 Source	 AV
 Menu	 Menu
 Exit	 Exit
 TTX/On	 Text
 Mix	 Shift + Pre Ch





Originale	Sostituto
 PR+	 Ch +
 PR-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Store	 Rec
 Flof/List	 Info
 Hold	 Guide
 Size	 Eject

Originale	Sostituto
 Cancel	 Shift + Back
 Index	 Back
 Time	 Shift + AV
 Reveal	 D. Menu
A1	 Shift + 1
A2	 Shift + 2
A3	 Shift + 3
A4	 Shift + 4
A5	 Shift + 5
B1	 Shift + 6
B2	 Shift + 7
B3	 Shift + 8
B4	 Shift + 9
B5	 Shift + 0

