 

















 


















 






Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Originale	Sostituto
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Text / Goto

 

















 












 





 



 








 




	Originale	Sostituto	Originale	Sostituto
		TXT/Menu		Menu / Home
		Red		Red / Netflix / Search
		Green		Green / APP / Repeat
		Yellow		Yellow / YouTube / Repeat
		Blue		Blue / Prime Video / Random
		[<>]		Shift + Zoom /
		Rec/l>		Rec / Rec Mode
		Play		Play / Slow
		Pause		Pause / Step / Freeze
		Stop		Stop / Hold
		I<		I<< / Preset-
		>I		>>I / Preset+
		<<		<< / Tune-
		>>		>> / Tune+





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I/II
 ◀ / Camera	 +  Shift + Info / Angle
 ?	 Setup / OPT /

Originale	Sostituto
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z/Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG/Top Menu	 Guide / EPG / -/--
 TVG/Top Menu	 D.Menu / Top
 TXT/Menu	 Menu / Home





Originale	Sostituto
 TXT/Menu	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [ <> ]	 Shift + Zoom /
 Rec/l>	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Originale	Sostituto





Originale	Sostituto
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	+  Shift + Info / Angle
	Setup / OPT /

Originale	Sostituto
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto





Originale	Sostituto
 TXT/Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [ <> ]	 Shift + Zoom /
 Rec/ >	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
  <	  << / Preset-
 >	 >>  / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

Originale	Sostituto





Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV/CL	AV / Input / RDS
Zoom	Zoom / Size
[...] / Subtitle	Subtitle / EQ
Audio / Language	Audio / Lang I/II
◀ / Camera	Shift + Info / Angle
?	Setup / OPT /

Originale	Sostituto
ECO	Display / Media
CEC	Smart / List
Mute	Mute / Dimmer
i	Info / Angle
Z/Back	Back / Return
PR+	CH+ / Page+
Up	Up
Vol-	Vol-
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Down	Down
PR-	CH- / Page-
TVG/Top Menu	Guide / EPG / -/--
TVG/Top Menu	D.Menu / Top
TXT/Menu	Text / Goto




**Originale**
**Sostituto**

	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

**Originale**
**Sostituto**