



 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 



 








 


 
 







 

 





 



 




Originale	Sostituto
 Standby	 Power
 Eject / Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Aspect	 Format
 Audio	 Dual
 Display	 Info
 Ch +	 Ch +
 Ch -	 Ch -
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Menu	 Menu
 DVD Setup / Exit	 Exit
 DVD Setup	 Options
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep





Originale	Sostituto
 Fav	 Pre Ch
 Fav -	 Shift + Ch -
 Fav +	 Shift + Ch +
 EPG	 Guide
 Angle / Text	 Text
 Zoom / Hold	 Shift + Eject
 TV / Radio	 TV/R
 Subtitle	 Subt
 D.Menu / Index	 D. Menu
 Title / Size	 3D
 D.Disp / Reveal	 List
 Goto / Subpage	 Smart
 Slow / Media	 Media
 Play / Pause	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>

Originale	Sostituto
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Red / Prog	 Red
 Green / Intro	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue

