 





 
 

 

 







 



 



 
 


 








Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Originale	Sostituto
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right




 

 

 



 










Originale	Sostituto
 Left	 Left
 Enter	 Ok
 CH+	 Ch +
 CH-	 Ch -
 FAV	 Pre Ch
 EPG	 Guide
 Info	 Info
 List	 List
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Size	 Format
 Reveal	 3D
 Subtitle	 Subt
 Subpage	 AV
 FAV+	 Shift + Ch +

Originale	Sostituto
 FAV-	 Shift + Ch -





Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Originale	Sostituto	Originale	Sostituto
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Originale	Sostituto	
Audio	SOUND DUAL	Dual
I<</[≡+]	⏮	I<<
>>I/[≡..]	⏭	>>I
[≡i]	HOME SMART	Smart
Play	PLAY MODE	Play
Pause	⏸	Pause
Stop	⏹	Stop
REP/Rec	REC MODE	Rec
<</[≡o]	⏪	<<
>>/[≡?]	⏩	>>
FAV	FAV PRE-CH	Pre Ch

Originale	Sostituto

