


 



 

 


 
 
 


 
 
 






 
 


 






Originale	Sostituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual


 



 



 







Originale	Sostituto
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right

 








Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Mute		Mute	Mute
[ I ]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Originale	Sostituto	Originale	Sostituto
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue



