


 

 

 

 

 
 


 
 
 

 

 

 





 


 


 




 




 



 

 

 

 



 



 

 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Ok		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Sound		Shift + Dual
	8		8		Pic		Shift + Format
	9		9		Ch+		Ch +
	0		0		Ch-		Ch -
	Audio		Dual		Sleep		Sleep
	Recall		Back		Aspect		Format
	Tv Menu		Menu		Freeze		Eject
	Source		AV		Tv/Radio		TV/R
	ChList		List		Text		Text





Originale		Sostituto	
	Epg		Guide
	Fav		Pre Ch
	Info		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Reveal		Media
	Hold		D. Menu
	Index		Shift + Info
	Subpage		Shift + AV
	List		Smart
	Mix		Options
	Subtitle		Subt
	Size		3D
	<<		<<
	>>		>>

Originale		Sostituto	
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec/Rep		Rec

