


 





 


 









 
 
 
 


 
 


 

 





 
 







 



 

 



 
 
 

 

 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Ok		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Sound		Shift + Dual
	8		8		Pic		Shift + Format
	9		9		Ch+		Ch +
	0		0		Ch-		Ch -
	Audio		Dual		Sleep		Sleep
	Recall		Back		Aspect		Format
	Tv Menu		Menu		Freeze		Eject
	Source		AV		Tv/Radio		TV/R
	ChList		List		Text		Text





Originale	Sostituto
Epg	Guide
Fav	Pre Ch
Info	Info
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Reveal	Media
Hold	D. Menu
Index	Shift + Info
Subpage	Shift + AV
List	Smart
Mix	Options
Subtitle	Subt
Size	3D
<<	<<
>>	>>

Originale	Sostituto
I<<	I<<
>>I	>>I
Play	Play
Pause	Pause
Stop	Stop
Rec/Rep	Rec

