


 








 







 
 

 


 



 



 
 


 



 



 






 
 
 

 




 









| Originale | Sostituto | Originale | Sostituto |
|--|---|--|---|
|  Standby |  Power |  Tv/Radio |  TV/R |
|  Source |  AV |  Vol+ |  Vol + |
|  1 |  1 |  Vol- |  Vol - |
|  2 |  2 |  Mute |  Mute |
|  3 |  3 |  CH+ |  Ch + |
|  4 |  4 |  CH- |  Ch - |
|  5 |  5 |  Menu |  Menu |
|  6 |  6 |  Exit |  Exit |
|  7 |  7 |  Up |  Up |
|  8 |  8 |  Down |  Down |
|  9 |  9 |  Right |  Right |
|  0 |  0 |  Left |  Left |
|  [*]/Display |  Info |  Enter |  Ok |
|  Recall |  Back |  TXT |  Text |
|  Freeze |  Options |  Play |  Play |
|  P.Mode |  Format |  Pause/Time Shift |  Pause |
|  S.Mode |  Dual |  Stop/EPG |  Stop |

| Originale | Sostituto | Originale | Sostituto |
|---|--|--|--|
|  TV |  DVD |  SAT |  AUX |
|  PLAY MODE |  REC MODE |  TV |  DVD |
|  DISC NAV |  SOUND |  AD |  SETTINGS |
|  LIST |  DUAL |  SUBT |  OPT |
|  PROG |  SEARCH |  PICTURE |  ECO |
|  SLEEP |  TV/R |  FORMAT |  3D |
|  E-MANUAL |  REPEAT |  ZOOM |  TIMER |
|  D.MENU |  TEXT |  UP |  AV |
|  TOP MENU |  MENU |  INFO | |
|  EXIT |  OK |  BACK | |
|  HOME |  SMART |  CH + | |
|  VOL + |  APP |  CH - | |
|  MEDIA |  1 |  2 |  3 |
|  1 |  4 |  5 |  6 |
|  2 |  7 |  8 |  9 |
|  3 |  8 |  9 |  FAV |
|  4 |  9 |  PRE-CH | |
|  5 |  GUIDE |  0 | |
|  6 |  A |  B |  C |
|  7 |  D | | |
|  8 |  | | |
|  9 |  | | |



