



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol -		Vol -
	Input		AV		P+		Ch +
	TV / Rad		TV/R		P-		Ch -
	Q.Menu		D. Menu		Mute		Mute
	Menu		Menu		1		1
	Guide		Guide		2		2
	Up		Up		3		3
	Right		Right		4		4
	Down		Down		5		5
	Left		Left		6		6
	OK		Ok		7		7
	Exit		Exit		8		8
	Return		Back		9		9
	Info		Info		0		0
	AV Mode		3D		List		List
	Fav / Mark		Pre Ch		Q.View		Smart
	Vol +		Vol +		Red		Red





	Originale	Sostituto	
	Stop		Stop
	Green		Green
	Play		Play
	Yellow		Yellow
	Blue		Blue
	Pause		Pause
	Text		Text
	I<<		I<<
	<<		<<
	T.Opt		Options
	>>		>>
	>>I		>>I
	Subtitles		Subt
	Rec		Rec
	SMPLink		Media

Originale	Sostituto





Originale	Sostituto

Originale	Sostituto

