



 

 

 

 

 


 
 

 



 

 

 

 

 





 















Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 O/F.Set	 Sleep / Timer
 [ ]/F. List	 Smart / List
 Audio	 Audio / Lang I/II
 [+]/Picture	 Picture / Format
 →[ ]←/Rec Menu	 D.Menu / Top
 Radio/Search	 TV/Radio /
 Radio/Search	 Shift + Red / Netflix /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 *EPG	 Guide / EPG / -/-
 0/AV	 0
 0/AV	 AV / Input / RDS
 # PIP	 Setup / OPT /
 Text	 Text / Goto
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Right	 Right








Originale		Sostituto		Originale		Sostituto	
	P-		CH- / Page-				
	Red/C-Set		Red / Netflix / Search				
	Green/SV		Green / APP / Repeat				
	Yellow/Title		Sound / Title				
	Yellow/Title		Yellow / YouTube / Repeat				
	Blue/Card		Blue / Prime Video / Random				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				













Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *EPG	 Guide / EPG / -/--
 0/AV	 AV / Input / RDS
 0/AV	 0
 #PIP	 Picture / Format
 Menu	 Menu / Home
 Info	 Info / Angle

Originale	Sostituto
 P+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Right	 Right
 P-	 CH- / Page-
 Red/C-Set	 Red / Netflix / Search
 Green/SV	 Green / APP / Repeat
 Yellow/Title	 Yellow / YouTube / Repeat
 Yellow/Title	 Sound / Title
 Blue/Card	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+





 

 

 
 
 

 

 

 





 

 

 

 

 







Originale		Sostituto		Originale		Sostituto	
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				







 
 



 
 
 


Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 O/F.Set	 Sleep / Timer
 [ ]/F. List	 Smart / List
 Audio/Repeat	 Shift + Green / APP /
 Audio/Repeat	 Audio / Lang I/II
 [+]/Picture	 Picture / Format
 →[ ]←/Rec Menu	 Text / Goto
 Radio/Search	 Shift + Red / Netfix /
 Radio/Search	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 DVD-AV	 AV / Input / RDS
 0/AV	 0
# PIP button" data-bbox="507 348 540 378"/> # PIP	 Setup / OPT /
 Disc-M	 D.Menu / Top
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Right	 Right







Originale	Sostituto	Originale	Sostituto
	P-		
	Red/C-Set		
	Green/SV		
	Yellow/Title		
	Yellow/Title		
	Blue/Card		
	<<		
	Play		
	>>		
	Rec		
	Pause		
	Stop		





Originale		Sostituto		Originale		Sostituto	
	Mute		Mute / Dimmer		8		8
	Power		Power		9		9
	O/F.Set		Sleep / Timer		*EPG		Guide / EPG / -/--
	[ ]/F.List		Smart / List		0/AV		0
	Audio/Repeat		Green / APP / Repeat		0/AV		AV / Input / RDS
	Audio/Repeat		Audio / Lang I/II		#PIP		Setup / OPT /
	[+]/Picture		Picture / Format		Menu		Menu / Home
	→[ ]←/Rec Menu		D.Menu / Top		End		Exit / Cancel / Clear
	Radio/Search		Red / Netflix / Search		Info		Info / Angle
	Radio/Search		TV/Radio /		P+		CH+ / Page+
	1		1		Up		Up
	2		2		Vol-		Vol-
	3		3		Left		Left
	4		4		OK		OK
	5		5		Down		Down
	6		6		Vol+		Vol+
	7		7		Right		Right





	Originale	Sostituto	Originale	Sostituto
		P-		CH- / Page-
		<<		<< / Tune-
		Play		Play / Slow
		>>		>> / Tune+
		Rec		Rec / Rec Mode
		Pause		Pause / Step / Freeze
		Stop		Stop / Hold

