 



 
 


 
 


 





 
 



 





 

 
 

 
 





 





Originale	Sostituto
 Power	 Power
 Tv/Radio	 TV/R
 Subtitle	 Subt
 AD/PIP/*	 Shift + Subt
 TV/PC	 Media
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List

Originale	Sostituto
 Q.View	 Smart
 FAV	 Pre Ch
 Guide	 Guide
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 Text	 Text
 Info	 Info
 T.Opt	 Shift + Options
 Settings	 Options
 Q.Menu	 Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down





Originale	Sostituto
Right	Right
Left	Left
OK	Ok
Simplink	D. Menu
Rec/*	Rec
Stop	Stop
<<	<<
Play	Play
Pause	Pause
>>	>>
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Originale	Sostituto

