
 








 

 





 



 








Originale	Sostituto
 Power	 Power
 Guide	 Guide / EPG / -/--
 Tv Input	 AV / Input / RDS
 AV Input	 Shift + AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 [≡♦]/STTL	 Subtitle / EQ
 [+]/Aspect	 Picture / Format
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 APPS	 Smart / List
 Left	 Left
 Up	 Up
 Right	 Right
 Home	 Shift + Menu /
 OK	 OK

Originale	Sostituto
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Originale		Sostituto		Originale		Sostituto	
6 _{mno}	6	TUNER	6				
7 _{pqrs}	7	AUX - HDD	7				
8 _{tuv}	8	USB	8				
9 _{wxyz}	9	BLUETOOTH	9				
? / HELP	?/Help	TOP MENU / D.MENU	D.Menu / Top				
0	0	HDMI - BAT	0				
Last View	Last View	PC FAV MARKER	Fav / Marker / PC				
<<	<<	TUNE-	<< / Tune-				
Play	Play	SLOW	Play / Slow				
>>	>>	TUNE+	>> / Tune+				
I<<	I<<	PRESET-	I<< / Preset-				
Pause	Pause	STEP - FREEZE	Pause / Step / Freeze				
>>I	>>I	PRESET+	>>I / Preset+				
Stop	Stop	HOLD	Stop / Hold				
Rec	Rec	REC MODE	Rec / Rec Mode				

