



Originale	Sostituto
 Power	 Power
 Preview	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return/Title	 Back / Return
 0	 0
 Display	 Display / Media
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Originale	Sostituto
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Disc Menu	 D.Menu / Top
 Down	 Down
 System Menu	 Menu / Home
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Audio	 Audio / Lang I/II

