

 
 

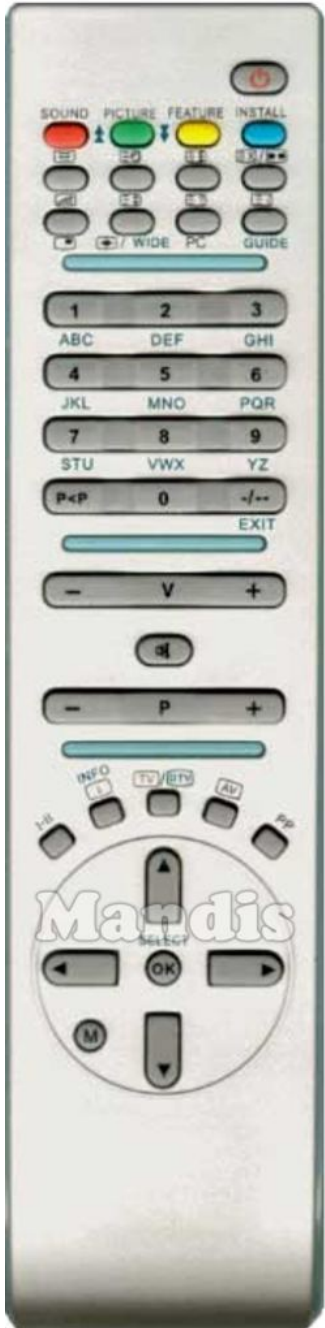 


 



Originale	Sostituto
 Power	 Power
 Red/Sound ↑	 Red
 Green/Picture/↓	 Green
 Yellow/Feature	 Yellow
 Blue/Install	 Blue
 [=]	 REPEAT TEXT Text
 [=0]	 SETTINGS OPT Options
 [=+]	 AD SUBT Subt
 [=x]/[· ·]	 PICTURE FORMAT Format
 [/≡]/[*]	 RETURN BACK Back
 [+](≡♦)/Wide	 ECO 3D 3D
 [=?]/PC	 HOME SMART Smart
 [=i]/Guide	 GUIDE Guide
 1	 1
 2	 2
 3	 3
 4	 4

Originale	Sostituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 FAV PRE-CH Pre Ch
 -/--	 SHIFT + GUIDE Shift + Guide
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 Mute	 MUTE Mute
 P+	 + CH Ch +
 P-	 CH - Ch -
 I-II	 SOUND DUAL Dual
 [i]/Info	 DISPLAY INFO Info
 TV/DTV	 SEARCH TV/R TV/R
 AV	 TIMER AV AV





Originale	Sostituto
 PP	 Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK/Select	 Ok
 M	 Menu

Originale	Sostituto

