



Originale	Sostituto
P100	Display / Media
Power	Power
REV	<< / Tune-
Doub	Audio / Lang I/II
1	1
2	2
3	3
Hold	Stop / Hold
4	4
5	5
6	6
Sub	Subtitle / EQ
Update	D.Menu / Top
7	7
8	8
9	9
Mix	Text / Goto

Originale	Sostituto
AV	AV / Input / RDS
0	0
-/--	Guide / EPG / -/--
P+	CH+ / Page+
Up	Up
Mute	Mute / Dimmer
TV/TXT	TV/Radio /
Menu	Menu / Home
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
Swap	Back / Return
P-	CH- / Page-
Down	Down
16:9	Picture / Format





	Originale	Sostituto	
	Red	Red / Netflix / Search	
	Green	Green / APP / Repeat	
	Yellow	Yellow / YouTube / Repeat	
	Blue	Blue / Prime Video / Random	
	Violet	Smart / List	
	[ ]	Setup / OPT /	
	♪	Sound / Title	
	PP	Shift + Smart / List	

Originale	Sostituto

