


















 





 



 


 






 

 

 



 

 





 

 

 



 



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Blue		Blue
	Source		AV		1		1
	Internet		Smart		2		2
	Sleep		Sleep		3		3
	Presets		Subt		4		4
	Multimedia		Media		5		5
	Rec		Rec		6		6
	Play		Play		7		7
	Pause		Pause		8		8
	Stop		Stop		9		9
	<<		<<		0		0
	>>		>>		TV		TV/R
	Lang		Dual		Return		Shift + Back
	[≡]		Pre Ch		Menu		Menu
	Red		Red		Q.Menu		D. Menu
	Green		Green		Back		Back
	Yellow		Yellow		Exit		Exit



