

























Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 AV / Input / RDS
 0/AV	 0
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+
 Left	 Left

Originale	Sostituto
 Vol-	 Vol-
 OK	 OK
 Down	 Down
 P-	 CH- / Page-
 i	 Info / Angle
 Format / Picture	 Picture / Format
 TXT	 Text / Goto
 Mute	 Mute / Dimmer
 Red/AKT	 Red / Netflix / Search
 Green/Timer	 Sleep / Timer
 Green/Timer	 Green / APP / Repeat
 Yellow/[I]	 Yellow / YouTube / Repeat
 Blue/[++]	 Blue / Prime Video / Random
 -O	 << / Tune-
 O+	 >> / Tune+
 -*	 I<< / Preset-
 *+	 >>I / Preset+











 




 

 
 





Originale		Sostituto		Originale		Sostituto	
	PIP		Setup / OPT /				
	IDTV-?		Smart / List				
	P/C-ATS		Display / Media				
	AUX	 + 	Shift + 7				







Originale		Sostituto		Originale		Sostituto	
	Power		Power				
	P+		CH+ / Page+				
	P-		CH- / Page-				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	<		Left				
	>		Right				
	<<		<< / Tune-				
	>>		>> / Tune+				










 



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol-	 Vol-
 1	 1	 OK	 OK
 2	 2	 P-	 CH- / Page-
 3	 3	 Down	 Down
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/AKT	 Red / Netflix / Search
 9	 9	 Green/Timer	 Green / APP / Repeat
 0/AV	 AV / Input / RDS	 Green/Timer	 Sleep / Timer
 0/AV	 0	 Yellow/[I]	 Yellow / YouTube / Repeat
 P+	 CH+ / Page+	 Blue/[++]	 Blue / Prime Video / Random
 Up	 Up	 -O	 << / Tune-
 Right	 Right	 O+	 >> / Tune+
 Vol+	 Vol+	 -*	 I<< / Preset-
 Left	 Left	 *+	 >>I / Preset+

Originale	Sostituto	Originale	Sostituto
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 OK	 EXIT	 RETURN
 CANCEL	 LIST	 VOL +	 CH PAGE +
 SMART	 MEDIA	 VOL -	 CH PAGE -
 DISPLAY	 TV	 DVD	 CD- STB
REPEAT	VIDEO	TAPE	TUNER
REPEAT A-B	AUX- HDD	USB	BLUETOOTH
RANDOM	AV 0	HDMI- SAT	FC
NETFLIX	APP	YouTube	FAV MARKER
SEARCH	GUIDE EPG	HDMI- SAT	0
REPEAT	NETFLIX	APP	Prime Video
REPEAT A-B	SEARCH	REPEAT A-B	RANDOM
RANDOM			





Originale	Sostituto
 PIP	 Setup / OPT /
 IDTV-?	 Smart / List
 P/C-ATS	 Display / Media
 AUX	 +  Shift + 7

Originale	Sostituto

