

 
 



 
 





 




 




 




 
 







 




 



 

 

 



 
 
 
 
Originale	Sostituto
 Power	 Power
 Disc	 Media
 Subtitle	 Subt
 Angle	 TV/R
 Zoom	 Eject
 Audio	 Dual
 Disc Menu	 D. Menu
 Setup	 Options
 Return/Title	 Back
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play

Originale	Sostituto
 >>I	 >>I
 Pause	 Pause
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep






 




 

 

 



 


 


 

Originale	Sostituto
 Power	 Power
 Tuner	 Media
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep
 Surr.	 Red
 Sound	 Dual





 

 
 






 

 

 




 
 
 
Originale	Sostituto	Originale	Sostituto
	Power		Power
	TV		Media
	Setup		Options
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I<<		I<<
	Play		Play
	>>I		>>I
	Stop		Stop
	Tv Vol+		Vol +
	Tv Vol-		Vol -
	Mute		Mute
	1		1

Originale	Sostituto	Originale	Sostituto
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Surr.		Red
	Sound		Dual





Originale	Sostituto
 Power	 Power
 AUX/DI	 Media
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 Sleep
 Surr.	 Red
 Sound	 Dual

