

 
 
 

 

 
 
 
 


 

 

 

 

 


 
 
 
 

 
 
 






 



 
 


Originale	Sostituto
 Power	 Power
 Energy Saving	 3D
 AV Mode	 Shift + AV
 Input	 AV
 TV / Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Pre Ch

Originale	Sostituto
 Vol +	 Vol +
 Vol -	 Vol -
 Fav Mark	 Shift + Pre Ch
 Ratio	 Format
 Mute	 Mute
 P + / Page +	 Ch +
 P - / Page -	 Ch -
 Menu	 Menu
 Guide	 Guide
 Q.Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Back	 Back
 Info	 Info





Originale		Sostituto		Originale	Sostituto
	Exit		Exit		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	T.Opt		Options		
	Subtitle		Subt		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	<<		<<		
	<<		I<<		
	>>		>>		
	>>		>>I		
	Simplink		Smart		

