






 
 
 




 


 
 


 




 
Originale	Sostituto
Power	Power
Tv Channel-	Ch -
Tv Channel+	Ch +
Power Tv	Shift + Power
Tv Vol-	Shift + Vol -
Tv Vol+	Shift + Vol +
Tv Mute	Shift + Mute
Tv Input	AV
Open / Close	Eject
Band	Red
DVD / Karaoke	Green
Aux	Yellow
USB	Blue
VSM / Virtual	Format
1	1
2	2
3	3

Originale	Sostituto
4	4
5	5
6	6
7	7
8	8
9	9
0	0
XTS Pro	Media
Marker	TV/R
Search	Shift + TV/R
Audio / Male	Dual
Sound / Female	Shift + Dual
Subtitle / Shadow	Subt
Return	Back
Setup	Options
Display	Info
Up / Preset +	Up





Originale	Sostituto
 Down / Preset -	 Down
 Right / Tun +	 Right
 Left / Tun -	 Left
 Menu	 Menu
 Title	 Smart
 << Scan - /	 <<
 >> Scan + /	 >>
 Play	 Play
 I<< / Key Con. b	 I<<
 >>I / Key Con. #	 >>I
 Pause / Step	 Pause
 Repeat	 Text
 Repeat A-B	 Shift + Text
 Stop	 Stop
 Volume +	 Vol +
 Volume -	 Vol -
 Prog / Memo.	 Shift + Sleep

Originale	Sostituto
 Clear	 Exit
 Zoom	 Shift + Eject
 Mute	 Mute
 Sleep	 Sleep
 Dimmer	 3D
 Echo Vol -	 Shift + Down
 Echo Vol +	 Shift + Up
 Mic Vol -	 Shift + Left
 Mic Vol +	 Shift + Right
 Enter	 Ok

