

 


 
 
 
 
 
 
 


 

 
 
 

 



 
 
 
 

 






 
 


 


 





 
 
 
 
 
 

 
 
 
 
 
 





 





Originale	Sostituto	Originale	Sostituto
	Power		Power
	Mute		Mute
	Function		Menu
	Sound		Dual
	EQ		Subt
	DVD		Media
	1/Timer On/Off		1
	2/Timer/Clock		2
	3/Sleep		3
	4/Disc Menu		4
	5/Title Menu		5
	6		6
	7		7
	8/SYNC		8
	9		9
	0		0
	Vol+		Vol +

Originale	Sostituto	Originale	Sostituto
	Vol-		Vol -
	I<<</RDS PTY		I<<<
	>>>I		>>>I
	<<<		<<<
	>>>/RDS Display		>>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Repeat		Text
	Home		Smart
	USB Rec		Rec
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up/Tuning Up		Up
	Down/Tuning		Down



Down



Originale	Sostituto
 Right/#	 Right
 Left/b	 Left
 Enter	 Ok
 Red/Display	 Red
 GreenMo/ST	 Green
 Yellow	 Yellow
 Blue/Keycon	 Blue
 Speed/CD Rec	 3D
 My Karaoke	 TV/R
 Mic Vol+	 Ch +
 Mic Vol-	 Ch -

Originale	Sostituto

