


 




 
 
 
 



 
 


 
 


 
 


 
 
 

 
 

 

 


 

 

 

 




 
 



 


 




 





 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right		Right
	Home		Smart		Left		Left
	Subtitle		Subt		OK		Ok
	Audio		Dual		Mute		Mute
	I<<		I<<		Setup		Menu
	Stop		Stop		Green		Green
	>>I		>>I		Red		Red
	<<		<<		Yellow		Yellow
	Play		Play		Blue		Blue
	Pause		Pause		1		1
	>>		>>		2		2
	Back		Back		3		3
	Options		Options		4		4
	Next Page		Ch +		5		5
	Prev Page		Ch -		6		6
	Up		Up		7		7
	Down		Down		8		8





Originale	Sostituto
 9	 9
 0	 0
 Search	 TV/R
 Eject	 Eject

Originale	Sostituto

