



Originale	Sostituto
TEST	Text / Goto
1	1
1	Shift + 1
2	2
2	Shift + 2
3	3
3	Shift + 3
EFFECT	Picture / Format
4	4
4	Shift + 4
5	5
5	Shift + 5
6	6
6	Shift + 6
7/P	Shift + 7
7/P	7
8	8

Originale	Sostituto
8	Shift + 8
9	9
9	Shift + 9
LEVEL	Down
LEVEL	Shift + Down
LEVEL	Shift + CH- /
LEVEL	Left
LEVEL	Vol-
LEVEL	CH- / Page-
LEVEL+	Up
LEVEL+	Shift + Up
LEVEL+	Shift + CH+ /
LEVEL+	Right
LEVEL+	Vol+
LEVEL+	CH+ / Page+
10/RETURN	Shift + Guide / EPG / -/-
10/RETURN	Guide / EPG / -/-





Originale	Sostituto	Originale	Sostituto
Audio Standby	Audio / Lang I/II	FM/AM	Shift + TV/Radio / Program
1	1	VCR	Shift + 4
2	2	Analog/Digital	Smart / List
3	3	FM/Mode	AV / Input / RDS
TV Standby	Power	Surround	Eject / Surround
4	4	DSP	Text / Goto
5	5	Surround DSP	Sound / Title
6	6	Dimmer	Shift + Mute / Dimmer
VCR Standby	Shift + Power	Tv/Video	TV/Radio /
7/P	7	Muting	Mute / Dimmer
DVD Standby	Shift + 2	VCR CH+	Shift + CH+ /
Play/TA/News/Info	Play / Slow	Tv CH+	CH+ / Page+
Sleep	Sleep / Timer	Tv Vol+	Shift + Vol+
I<</PTY-	I<< / Preset-	Vol+	Vol+
Pause/PTY Search	Pause / Step / Freeze	VCR CH-	Shift + CH- /
>>I/PTY+	>>I / Preset+	Tv CH-	CH- / Page-
Stop/Display	Stop / Hold	Tv Vol-	Shift + Vol-

Originale	Sostituto	Originale	Sostituto
FM/AM	Shift + TV/Radio / Program	FM/AM	Shift + TV/Radio / Program
VCR	Shift + 4	VCR	Shift + 4
Analog/Digital	Smart / List	Analog/Digital	Smart / List
FM/Mode	AV / Input / RDS	FM/Mode	AV / Input / RDS
Surround	Eject / Surround	Surround	Eject / Surround
DSP	Text / Goto	DSP	Text / Goto
Surround DSP	Sound / Title	Surround DSP	Sound / Title
Dimmer	Shift + Mute / Dimmer	Dimmer	Shift + Mute / Dimmer
Tv/Video	TV/Radio /	Tv/Video	TV/Radio /
Muting	Mute / Dimmer	Muting	Mute / Dimmer
VCR CH+	Shift + CH+ /	VCR CH+	Shift + CH+ /
Tv CH+	CH+ / Page+	Tv CH+	CH+ / Page+
Tv Vol+	Shift + Vol+	Tv Vol+	Shift + Vol+
Vol+	Vol+	Vol+	Vol+
VCR CH-	Shift + CH- /	VCR CH-	Shift + CH- /
Tv CH-	CH- / Page-	Tv CH-	CH- / Page-
Tv Vol-	Shift + Vol-	Tv Vol-	Shift + Vol-



