



| Originale | Sostituto |
|--|---|
|  On / Stand-By |  Power |
|  Clear / Dimmer |  Yellow |
|  Memory |  Green |
|  Disc Select 1 |  Shift + 1 |
|  Disc Select 2 |  Shift + 2 |
|  Disc Select 3 |  Shift + 3 |
|  Disc Select 4 |  Shift + 4 |
|  Disc Select 5 |  Shift + 5 |
|  CD |  Smart |
|  Tuner (Band) |  Media |
|  Video / AUX / USB |  Shift + Smart |
|  CD Random |  Red |
|  CD Pause |  TV/R |
|  USB Pause |  Shift + Pause |
|  CD Pause |  Pause |
|  CD Stop |  Format |
|  CD Stop |  Stop |

| Originale | Sostituto |
|--|--|
|  CD Play |  Sleep |
|  CD Play |  Play |
|  USB Stop |  Shift + Stop |
|  USB Play |  Shift + Play |
|  Tuning + |  Shift + Up |
|  Tuning + |  Up |
|  Tuning - |  Shift + Down |
|  Tuning - |  Down |
|  >>I / >> / Preset Up |  >> |
|  >>I / >> / Preset Up |  >>I |
|  >>I / >> / Preset Up |  Right |
|  I<< / << / Preset Down |  << |
|  I<< / << / Preset Down |  I<< |
|  I<< / << / Preset Down |  Left |
|  Display |  Info |
|  Folder |  Ok |
|  Clock / Timer |  AV |



