 


 
 
 

 

 


 








 

 
 
 

 
 


 
 


 




 


 
 


 


 
 



 
 
 

 
 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Pause		Pause
	Home		Smart		<<		<<
	Disc/Pop-Up Menu		D. Menu		>>		>>
	Radio		TV/R		Vol+		Vol +
	Audio Source		AV		Vol-		Vol -
	Top Menu		Menu		Mute		Mute
	Back		Back		Sound Settings		Shift + Options
	Options		Options		Audio		Dual
	Up		Up		1		1
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	OK		Ok		5		5
	I<		I<<		6		6
	>I		>>I		7		7
	Stop/Eject		Stop		8		8
	Play		Play		9		9





Originale	Sostituto	Originale	Sostituto
 0	 0		
 Repeat	 Text		
 Subtitle	 Subt		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Originale	Sostituto

