



 



























 

 

 



































Originale		Sostituto		Originale		Sostituto	
	Power		Power		Up		Up
	EPG		Guide / EPG / -/--		Display		Display / Media
	REP		TV/Radio /		Left		Left
	Mute		Mute / Dimmer		OK		OK
	Rec List		Shift + Rec / Rec Mode		Right		Right
	CH List		Smart / List		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Down		Down
	Eject		Eject / Surround		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		1		1
	Stop		Stop / Hold		2		2
	I<<		I<< / Preset-		3		3
	>>I		>>I / Preset+		4		4
	Pause		Pause / Step / Freeze		5		5
	Play		Play / Slow		6		6
	<<		<< / Tune-		7		7
	>>		>> / Tune+		8		8
	Source		AV / Input / RDS		9		9





Originale	Sostituto
0	0
Recall	Back / Return
Fav	Fav / Marker / PC
Vol +	Vol+
Picture	Picture / Format
Nicam / A2	Audio / Lang I/II
CH +	CH+ / Page+
Vol -	Vol-
Sound	Sound / Title
Sleep	Sleep / Timer
CH -	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue / Screen	Blue / Prime Video / Random
Setup / TV/Txt	Setup / OPT /
D-Menu /	D.Menu / Top

Originale	Sostituto
Title / Reveal	Shift + Sound / Title
PRO	Shift + Media / Display
LAN / Hold	Shift + Smart / List
Size / A-B	Zoom / Size
Goto / Subpage	Text / Goto
Index / Slow	Info / Angle



Cancel Menu