 





 




 
 

 






Originale	Sostituto
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Picture / Format
	 D.Menu / Top
	 Text / Goto
	 Sound / Title
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold

Originale	Sostituto
	 Rec / Rec Mode
	 Smart / List
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 Left
	 OK
	 Right
	 Guide / EPG / -/--
	 Down
	 Info / Angle
	 CH+ / Page+
	 CH- / Page-
	 TV/Radio /
	 Vol+
	 Vol-
	 Audio / Lang I/II





Originale		Sostituto	
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
↔	Recall	RETURN BACK	Back / Return

Originale		Sostituto	

