
 





 





 



 

 

 















 

 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 --/--	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Originale	Sostituto	Originale	Sostituto
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 DISC NAV	 PLAY MODE
 Vol +	 Right	 LIST	 II
 Vol -	 Vol -	 DUAL	 ■
 Vol -	 Left	 SUBT	 ●
 OK	 Ok	 AD	 SETTINGS
 SWAP	 Back	 PICTURE	 ECO
 16:9	 Format	 FORMAT	 3D
 White / i	 Info	 E-MANUAL	 TIMER
 Red	 Red	 REPEAT	 AV
 Green	 Green	 ZOOM	 TOP MENU
 Yellow	 Yellow	 TEXT	 DISPLAY INFO
 Blue	 Blue	 MENU	 OK
 Stop	 Stop	 RETURN BACK	 CLEAR
 Reveal	 Smart	 EXIT	 HOME





Originale	Sostituto	Originale	Sostituto
 Double	 Media		
 SUB	 Subt		
 MIX	 +  Shift + Text		
 Update	 Eject		

