




 











 











 















 







 

 















 

 

 
 

 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 -/--	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Originale	Sostituto	Originale	Sostituto
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 PLAY MODE	 STOP
 Vol +	 Right	 PAUSE	 EJECT
 Vol -	 Vol -	 SKIP BACKWARD	 SKIP FORWARD
 Vol -	 Left	 SKIP STOP	 REPEAT
 OK	 Ok	 DISC NAV	 SOUND
 SWAP	 Back	 DUAL	 AD
 16:9	 Format	 SUBT	 SETTINGS
 White / i	 Info	 SEARCH	 PICTURE
 Red	 Red	 E-MANUAL	 ECO
 Green	 Green	 REPEAT	 3D
 Yellow	 Yellow	 ZOOM	 TIMER
 Blue	 Blue	 D.MENU	 AV
 Stop	 Stop	 TOP MENU	 DISPLAY INFO
 Reveal	 Smart	 MENU	 OK
		 CLEAR	 RETURN BACK
		 EXIT	 BACK
		 VOL +	 HOME
		 VOL -	 SMART
		 1	 APP
		 2	 MEDIA
		 3	 CH +
		 4	 CH -
		 5	
		 6	
		 7	
		 8	
		 9	
		0	FAV
		GUIDE	PRE-CH
		A	A
		B	B
		C	C
		D	D





Originale	Sostituto
 Double	 Media
 SUB	 Subt
 MIX	 +  Shift + Text
 Update	 Eject

Originale	Sostituto

