
 
 



 
 

 




 

 




 






 
 


 

 

 
 
 





 




Originale	Sostituto	Originale	Sostituto
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Subt.List	 Subt	Back	 Back
Sleep Timer	 Sleep	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 Info	Menu audio	 Dual
Menu video	 D. Menu	Volume-	 Vol -
Return TV	 TV/R	Chan.Down	 Ch -
Txt Expand	 Eject	1	 1
Text	 Text	2	 2
Menu	 Menu	3	 3
Menu Up	 Up	4	 4
Display	 Shift + Info	5	 5
TV/AV	 AV	6	 6
Menu Left	 Left	7	 7



Originale	Sostituto	Originale	Sostituto
8	 8	3.*	 +  Shift + 3
9	 9	Level L	 <<
Guide -/-- 1.	 Guide	Level R/Woofer	 >>
0/10	 0	Audio-	 +  Shift + Vol -
2.Fav P/C 2.	 Pre Ch	4.# 16:9	 Format
Red	 Red	Audio+	 +  Shift + Vol +
On/Tim	 Options	Tone-	 +  Shift + Down
Nicam/Mono	 List	Tone+	 +  Shift + Up
Off/Tim	 3D		
Green	 Green		
Mix Scan	 +  Shift + Text		
Color- S.Std	 +  Shift + Dual		
Yellow	 Yellow		
Color+ P.Std	 +  Shift + Format		
Blue	 Blue		
Contrast+	 +  Shift + Ch +		
Contrast-	 +  Shift + Ch -		

