


 

 

 










 


 

 

 

 

 

 
 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 []	 TV/R
 Sound	 Dual
 *	 Options
 Source	 AV
 [X]	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 [i+]/[?]	 Info
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [≡]/Text	 Text
 -/--/Recall	 Pre Ch
 Guide	 Guide
 Up	 Up
 OK	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 Prog+	 Ch +
 Prog-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -



