
 
 
 





Originale	Sostituto
 POWER	 Power
 SCREEN SIZE	 3D
 AUTO SET UP	 Options
 MUTE	 Mute
 ZOOM	 Eject
 PC 1	 Shift + 1
 PC 2	 Shift + 2
 DISPLAY	 Info
 TV	 TV/R
 SCART	 AV
 DVI	 Shift + 3
 PLASMA MENU	 D. Menu
 PLASMA MENU	 Shift + D. Menu
 UP / CH +	 Up
 UP / CH +	 Ch +
 DOWN / CH -	 Down
 DOWN / CH -	 Ch -

Originale	Sostituto
 RIGHT	 Right
 LEFT	 Left
 SET	 Ok
 VOL +	 Vol +
 VOL -	 Vol -
 MENU TV	 Menu
 PIP ON / OFF TV	 Media
 PIP SWAP TV	 I<<
 PIP MOVE TV	 >>I
 PIP TYPE TV	 Shift + Media
 AUDIO TV	 Dual
 CLOCK TV	 Sleep
 1 TV	 1
 2 TV	 2
 3 TV	 3
 4 TV	 4
 5 TV	 5





	Originale	Sostituto	Originale	Sostituto
	6 TV	6		
	7 TV	7		
	8 TV	8		
	9 TV	9		
	0 TV	0		
	TV / TEXT / MIX	Text		
	LIST TV	Smart		
	ZOOM TV	Shift + Eject		
	HOLD TV	Stop		
	REVEAL TV	Format		
	INDEX TV	Pause		
	EXPAND TV	Exit		
	RED TV	Red		
	GREEN TV	Green		
	YELLOW TV	Yellow		
	BLUE TV /	Blue		
	BLUE TV /	Subt		



SUBTITLES