





 

 
 
 





 
 



 


 
 


 
 

 
 
 
 
 

 

 
 
 
 
 

 





 
 
 

 
 
 



 
 

 

 
 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	PVR Rec		Rec		Right		Right
	PVR List		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Smart		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Tv/Radio		TV/R		7		7
	Favourite		Pre Ch		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back








 
 

 
 
 





 
 



 


 
 


 
 


 
 
 
 

 

 
 
 
 
 

 



 

 
 
 

 
 




 
 

 

 



Originale		Sostituto		Originale		Sostituto	
	Goto		3D				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	RPT		Media				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				







Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	PVR Rec		Rec		Right		Right
	PVR List		List		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Smart		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Tv/Radio		TV/R		7		7
	Favourite		Pre Ch		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back





Originale	Sostituto
GOTO	3D
<<	<<
>>	>>
I<<	I<<
>>I	>>I
Play	Play
Pause	Pause
Stop	Stop
RPT	Media
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

Originale	Sostituto

