






 




 

 






 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 5	 5
 4	 4
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PR.List	 List
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Pic.Mode	 Shift + Format

Originale	Sostituto
 S.Mode	 Shift + Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Exit	 Exit
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Zoom	 Eject
 Sleep	 Sleep
 Rec	 Rec
 Rec List	 Smart
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow		>>		>>
	Blue		Blue				
	FAV		Pre Ch				
	Tv/Radio		TV/R				
	I/II/Audio		Dual				
	Subtitle		Subt				
	Index		Media				
	Reveal		Format				
	ATV/DTV		Options				
	Info		Info				
	Text		Text				
	Play/Size		Play				
	Pause/Subpage		Pause				
	Stop/Hold		Stop				
	I<<		I<<				
	>>I		>>I				
	<<		<<				

