














 

 


 


 


 

 
 






Originale	Sostituto
 3D	 Picture / Format
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Prog+	 CH+ / Page+
 0	 0
 Vol+	 Vol+
 Prog-	 CH- / Page-
 Vol-	 Vol-

Originale	Sostituto
 Up/CH+	 Up
 Left/Vol-	 Left
 OK	 OK
 Right/Vol+	 Right
 Down/CH-	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 EPG	 Guide / EPG / -/--
 List	 Smart / List
 TXT	 Text / Goto
 S-T	 Sound / Title
 Tv/R	 TV/Radio /
 Timer	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





	Originale	Sostituto	Originale	Sostituto
	Stop	 Stop / Hold		
	Rec	 Rec / Rec Mode		
	←	 Back / Return		
	<<	 << / Tune-		
	Red	 Red / Netflix / Search		
	>>	 >> / Tune+		
	Green	 Green / APP / Repeat		
	l<<	 l<< / Preset-		
	Yellow	 Yellow / YouTube / Repeat		
	>>l	 >>l / Preset+		
	Blue	 Blue / Prime Video / Random		

